

GURIN
PROFESSIONAL
HAIR STYLER IRON
OWNER'S MANUAL

GURIN

Features:

- ON/OFF Switch
- Power LED indicator
- Thermostat temperature
- Ceramic coating plate with Tourmaline
- Dual voltage: 110-240V 50/60Hz
- Adjustable temperature: 140-450°F
- Power: 105W
- Far infrared technology developed by NASA
- 1.25 inch "Floating" Tourmaline ceramic plates allow hair to pass through smoothly

Operating Instructions

Use this appliance near water. This appliance is intended for household use only. Plug the appliance into an appropriate electrical outlet. Read all safety precautions, including, but not limited to those stated herein, should be used at all times while appliance is used, especially if appliance is used by children.

Plug the appliance into an appropriate electrical outlet. Switch the appliance to ON if equipped with an ON/OFF switch. A Red LED light will illuminate to indicate that the appliance is equipped with a temperature control knob, the desired temperature can be set. Move the iron moving to avoid damage to hair from excess heat.

DO NOT TOUCH the plates as they become HOT.

Slide the hair between the plates and use the handle tongs together to close the appliance, keeping pressure on the plates between the plates. Slide the iron away from the roots and towards the end of the hair, all while using the handle tongs to apply the pressure on the hair between the plates. Repeat as desired.

Straightening your Hair

1. Hair should be dry and tangles free before using the straightening iron.
2. After plugging the appliance into an appropriate electrical outlet, Switch the iron to ON position.
3. Adjust the temperature using the temperature dial.
4. Divide the hair into manageable sections and clip the upper layers on top of your head, out of the way. Work with the layers underneath first.
5. Test the styler on a small section of hair and if needed, adjust the temperature according to your hair. If you discover that you need a lower temperature, adjust it using the temperature dial. Because the straightener is already hot, it may take a minute to cool down.
6. Starting at the roots, firmly clamp the hair between the two plates and glide the straightener down the entire hair strand, from root to tip, in one smooth motion. Keep the iron moving to avoid damage to the hair from excess heat.
7. After use, turn OFF the straightener and unplug the cord from the electrical outlet. Allow time for the appliance to cool before storing. Store the appliance in a dry and safe place out of the reach of children.

Other Styling Hints

- **SOFT CURLS** - Insert a 2" section of hair between the plates, then squeeze the handle tongs together and glide iron slowly through the hair from the roots to the ends, and then wind the hair around the plates and hold before releasing.
- **FLIP OUT** - Insert a 2" section of hair between the plates, then squeeze the handle tongs together and glide iron slowly toward the ends. When the ends are reached, turn the iron slightly outwards to give a flip out at the ends.
- **CURL IN** - Insert a 2" section of hair between the plates, then squeeze the handle tongs together and glide iron slowly toward the ends. When the ends are reached, turn the iron slightly inwards to give a cute curl at the ends.

Maintenance & Care

Ensure appliance is turned off and unplugged from power source before cleaning.

When cleaning, use a soft, damp cloth. Do not use harsh chemicals or solvents on the appliance.

IMPORTANT SAFETY INSTRUCTIONS

Do not use with other electrical appliances, especially when children are present. Safety precautions should always be followed, including the following:

ALL INSTRUCTIONS MUST BE FOLLOWED. PLEASE READ THE USER MANUAL BEFORE USING. KEEP AWAY FROM WATER

Do not use with most electrical appliances, especially when the switch is live even when the switch is off. This may reduce the risk of death by electric shock.

Do not use this appliance immediately after using. Do not use while bathing. Do not place or store appliance where it can fall or be pulled into a tub or

- Do not place in or drop into water or other liquid.
- Do not reach for an appliance that has fallen into water. Unplug immediately.

WARNING- To reduce the risk of burns, electrocution, fire, or injury to persons:

- An appliance should never be left unattended when plugged in.
- Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped into water. Return the appliance to a Gurin for examination and repair.
- Keep the cord away from heated surfaces. Do not wrap the cord around the appliance. Do not wrap the cord around the appliance.
- Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.

- Never use while sleeping.
- Never drop or insert any object into any opening or hose.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Connect this appliance to a properly grounded outlet only.
- Do not use an extension cord with this appliance.
- NEVER use the device in water or other liquids. Never use the device near a bathtub, shower, containers full of water, or any other damp place. Never use it with bare feet or when hands and feet are wet.
- Do not place the hot hair Curler on plate or any material sensitive to heat.
- Do not touch the hair Curler when it is hot. Always be very careful not to burn yourself when styling.
- Do not use the appliance for any other purpose than its intended use.
- Do not use with voltage converter
- Allow flat iron to store before storing

SAVE THESE INSTRUCTIONS

Limited warranty

This appliance is warranted against defects in material or workmanship. We will repair or replace (at our option) this appliance for ONE (1) year from the date of purchase if the appliance is defective in materials or workmanship. Please retain your original sales receipt and this brochure, as you will need them to register the appliance and to obtain service under these warranties.

Distributed by:

Gurin Products LLC
2522 Chambers Road, Suite 100
Tustin, CA-92780
www.gurinproducts.com