

MAINTENANCE


1. The components of the scale are elastic material and vulnerable to prolonged pressure. Please do not put any weight on the scale when not in use.
2. Keep the device dry and not exposed to water in order not to destroy components.
3. Please avoid dropping the device from a high position or crash fiercely.
4. Remove the batteries if the scale is not being used for a long time.
5. The scale is just for kitchen use, not for industry purposes.
6. Please do not use this device at a place with electromagnetic interference, or it will weigh unstably. (e.g. Keep away from mobile phones under communication; Keep away from microwave).

Warranty Issues :

Log on to www.gurinproducts.com or send email to support@gurinproducts.com




**Precision Digital Kitchen Scale
with blue back light LCD display
Model Number: KS-100**

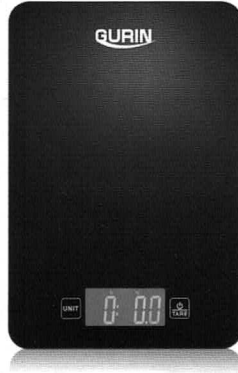

Gurin Products, LLC
2522 Chambers Road, Suite 100
Tustin, CA-92780
www.gurinproducts.com

LCD DISPLAY

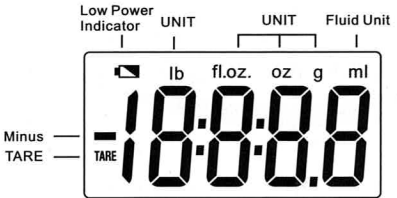

SPECIFICATIONS

1. Capacity: 5g-5000g
2. Division: 1g
3. Unit: lb:oz / g / fl.oz / ml
4. Size: 240*168*15.85 mm
5. Work current: Work mode $\leq 30\text{mA}$
Standby mode $\leq 30\mu\text{A}$
6. Power: 2 * CR2032 batteries (DC6V)
7. Work temperature: 10-50 °C
8. Humidity: $\leq 90\% \text{RH}$

OPERATION

STEP 1

Put the scale on a hard and flat surface
(Avoid carpet or soft surface).



OPERATION CHANGE UNIT

When the device is powered on, you can press "UNIT" to change among "lb:oz/g/fl.oz./ml. After choosing the proper UNIT, you can weigh the material. The device will memorize the UNIT you choose last time.

WEIGH MODE:

Open the battery cover and put in two CR2032 batteries properly. Put the scale on a flat and hard floor then press "ON/OFF/TARE" key to start the device. 3 seconds after putting material on the scale, the weight digits on the LCD will keep stable. For example, if it displays 177g. It is the actual weight of the material. When you need a container to hold the material, firstly put the container on the scale. After the digits on the LCD keep stable (e.g. it displays 300g), please press "ON/OFF/TARE" once, the scale will start the "TARE" function and the digits on LCD turn to "0g". Then you can put the material in the container and weigh it. After you take off the container, the digits on the LCD will display "-300g". You can press "ON/OFF/TARE" key to reset it to "0g". In any condition, if the LCD displays "0g", you can press "ON/OFF/TARE" key to power off the device.

INDICATION / ERROR

1. When the LCD displays "Lo" and powered off, you will have to change new batteries.
2. When the weight is more than 5.1kgs, the LCD will display "0-lb". You will have to remove the material from the scale to avoid destroy.