



Instruction Manual

DHWD-310 MID SIZE DEHUMIDIFIER

www.miraproducts.com

Instructions for use

Please read all instructions carefully

Getting started

Remove the dehumidifier from the box
Remove any packaging from the product

Place the packaging inside the box and store for safekeeping

In the box

Dehumidifier

DC 12V 5A AC/DC adapter

Instruction manual

Features

Light weight and portable, auto switch-off when full, Helps prevent condensation, damp and musty smells caused by excess humidity in the home.

Safety instructions

- *Indoor use only.
- *Do not immerse in any liquids.
- *If the supply cord is damaged, it must be replaced by a special cord or assembly available from the service agent or a qualified electrician in order to avoid a hazard.
- *Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

*This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instructions concerning use of the appliance in a safe way and understand the hazards involved.

- *Use this appliance only as described in the instruction manual. As with all electrical equipment, whilst the instructions aim to cover as many eventualities as possible, Caution and common sense should be applied when operating and installing this appliance.
- *This appliance is designed to dehumidify domestic rooms and must not be used for other purposes.
- *Do not attempt to modify or alter this appliance, do not attempt to carry out repairs.
- *This product must be used exclusively by adults. Do not allow children to play with this appliance.
- *If the power cable is damaged, it must be replaced by specialist personnel only.
- *The appliance must be connected to an efficient earth installation. Have your electrical circuit checked by a qualified electrician.
- *The use of extension leads is not recommended, however if it is necessary then follow carefully the extension lead instructions.
- *Before cleaning or maintenance, always unplug the appliance from the mains socket.
- *Do not move the appliance by pulling the power cable.
- *Do not install the appliance in rooms containing gas, sulphur or oil. Do not install near sources of heat.
- *Do not use the appliance on a sloping surface.
- *Do not rest heavy objects on top of the appliance.
- *Do not use outdoors.
- *Do not obstruct the air intake or outlet.
- *To protect against a fire, electric shock or personal injury, do not immerse cord, electric plugs or appliance in water or other liquids.
- *This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
- *Children should be supervised to ensure that they do not play with the appliance.

*Save these instructions.

Brief notes on humidity

Air always contains a certain amount of water in the form of vapour. This is commonly known as humidity. This determines the level of humidity in the atmosphere. The capacity of the air to hold water vapour increases with temperature. This is why when the temperature in your home drops the water vapour contained in the air condenses on to the colder surfaces such as windows and walls.

The purpose of a dehumidifier is to remove the excess moisture from the air, avoiding the damage caused by condensation.

Product Diagram



Power on

LED full indicator

On/Off switch

Water tank

Instructions for use

Position the appliance in the room to be dehumidified.


A free space of 50cm must be left at the front and the back of the dehumidifier, so as not to block the air intake or outlet.

Do not place the dehumidifier next to a radiator or other heat source as this will reduce its performance.


For on-going usage we suggest positioning in a hallway or on a landing. Please remember to keep internal doors ajar to allow circulation.

To Operate

1. Plug the AC/DC power jack of AC/DC power adapter to the AC/DC power socket, then connect the AC plug of AC/DC power adapter into the appropriate main socket.
2. Press the "On/Off" switch to the "I" position, and the mini dehumidifier will begin to operate and power on LED will light up. Listen and feel for the air blowing from dry air outlet.
3. To switch off the unit, press the "On/Off" button to the "O" position and the dehumidifier will turn off.

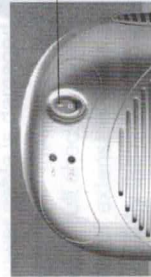


Press I to switch ON

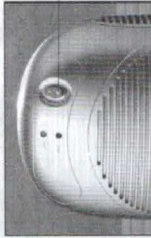

Press O to switch off

REMOVABLE WATER TANK

The water tank is full when approximately 1500ml of water has been collected, the unit will automatically switch off and the LED full indicator will light up.

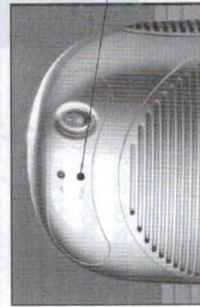

LED full indicator light up

To remove the water tank, first switch off the mini dehumidifier, press the "On/Off" switch to the "I" position again. Then remove the water tank from the unit and pour the water down the sink and put the water tank back into the unit. To continue demineralizing press the "On/Off" switch to the "I" position again.

After using, regularly clean and store safely.

Cleaning & Maintenance
Before cleaning the unit, turn off the mini dehumidifier, and unplug the AC plug from the main socket. Use a soft cloth to clean the surface of the unit with a soft brush to remove dust from the air inlet and outlet grille.

Do's and Don'ts
1. When you have finished using the mini dehumidifier, you should switch the unit on.
2. Do not place next to a radiator or other heat source.
3. Always place the unit on a stable and flat surface.
4. Keep the front inlet grill and the top outlet grille clean at all times and do not cover by placing the "On/Off" switch to the "O" position.



Distributed by:

Gwin Prohiber, LLC

5835 Champagne Road, Suite 100

Justin, CA 92510